

Объем заливаемого масла в зависимости от монтажного положения (л).

Габарит	Монтажное положение редуктора					
	M1	M2	M3	M4	M5	M6
	объем масла (л)					
R17	0.25	0.5	0.35	0.6	0.35	0.35
R27/R27F	0.25	0.7	0.4	0.7	0.4	0.4
R37/R37F	0.3	0.9	1	1.1	0.8	1
R47/R47F	0.7	1.6	1.5	1.7	1.5	1.5
R57/R57F	0.8	1.8	1.7	1.9	1.7	1.7
R67/R67F	1.1	2.6	2.8	3.2	1.8	2
R77/R77F	1.2	3.8	3.6	4.3	2.5	3.4
R87/R87F	2.3	6.7	7.2	7.8	6.3	6.5
R97	4.6	11.7	11.7	13.5	11.3	11.7
R107	6	16.3	16.9	19.2	13.2	15.9
R137	10	28	29.5	31.5	25	25
R147	15.4	46.5	48	52	39.5	41
R167	27	82	78	88	66	69
RF17	0.25	0.5	0.35	0.6	0.35	0.35
RF27	0.25	0.7	0.4	0.7	0.4	0.4
RF37	0.4	0.9	1	1.1	0.8	1
RF47	0.7	1.6	1.5	1.7	1.5	1.5
RF57	0.8	1.8	1.7	1.8	1.7	1.7
RF67	1.2	2.7	2.7	3.2	1.9	2.1
RF77	1.2	3.8	3.3	4.1	2.4	3
RF87	2.4	6.8	7.1	7.7	6.3	6.4
RF97	5.1	11.9	11.2	14	11.2	11.8
RF107	6.3	15.9	17	19.2	13.1	15.9
RF137	9.5	27	29	32.5	25	25
RF147	16.4	47	48	52	42	42
RF167	26	82	78	88	65	71
RX57	0.6	0.8	1.3	1.3	0.9	0.9
RX67	0.8	0.8	1.7	1.9	1.1	1.1
RX77	1.1	1.5	2.6	2.7	1.6	1.6
RX87	1.7	2.5	4.8	4.8	2.9	2.9
RX97	2.1	3.4	7.4	7	4.8	4.8
RX107	3.9	5.6	11.6	11.9	7.7	7.7