

Объем заливаемого масла в зависимости от монтажного положения (л).

Габарит	Монтажное положение редуктора					
	M1	M2	M3	M4	M5	M6
	объем масла (л)					
K37	0.5	1	1	1.3	1	1
K47	0.8	1.3	1.5	2	1.6	1.6
K57	1.2	2.3	2.5	3	2.6	2.4
K67	1.1	2.4	2.6	3.4	2.6	2.6
K77	2.2	4.1	4.4	5.9	4.2	4.4
K87	3.7	8	8.7	10.9	7.8	8
K97	7	14	15.7	20	15.7	15.5
K107	10	21	25.5	33.5	24	24
K127	21	41.5	44	54	40	41
K157	31	62	65	90	58	62
K167	35	100	100	125	85	85
K187	60	170	170	205	130	130
KF37	0.5	1.1	1.1	1.5	1	1
KF47	0.8	1.3	1.7	2.2	1.6	1.6
KF57	1.3	2.3	2.7	3	2.9	2.7
KF67	1.1	2.4	2.8	3.6	2.7	2.7
KF77	2.1	4.1	4.4	6	4.5	4.5
KF87	3.7	8.2	9	11.9	8.4	8.4
KF97	7	14.7	17.3	21.5	15.7	16.5
KF107	10	22	26	35	25	25
KF127	21	41.5	46	55	41	41
KF157	31	66	69	92	62	62
KA37	0.5	1	1	1.4	1	1
KA47	0.8	1.3	1.6	2.1	1.6	1.6
KA57	1.3	2.3	2.7	3	2.9	2.7
KA67	1.1	2.4	2.7	3.6	2.6	2.6
KA77	2.1	4.1	4.6	6	4.4	4.4
KA87	3.7	8.2	8.8	11.1	8	8
KA97	7	14.7	15.7	20	15.7	15.7
KA107	10	20.5	24	32	24	24
KA127	21	41.5	43	52	40	40
KA157	31	66	67	87	62	62
KA167	35	100	100	125	85	85
KA187	60	170	170	205	130	130