

Объем заливаемого масла в зависимости от монтажного положения (л).

Габарит	Монтажное положение редуктора					
	M1	M2	M3	M4	M5	M6
	объем масла (л)					
S37	0.25	0.4	0.5	0.6	0.4	0.4
S47	0.35	0.8	0.7	1.1	0.8	0.8
S57	0.5	1.2	1	1.5	1.3	1.3
S67	1	2.0	2.2	3.2	2.6	2.6
S77	1.9	4.2	3.7	6	4.4	4.4
S87	3.3	8.1	6.9	12	8.4	8.4
S97	6.8	15	13.4	22.5	17	17
SF37	0.25	0.4	0.5	0.6	0.4	0.4
SF47	0.4	0.9	1.9	1.2	1.0	1
SF57	0.5	1.2	1	1.6	1.4	1.4
SF67	1	2.2	2.3	3.2	2.7	2.7
SF77	1.9	4.1	3.9	6.5	4.9	4.9
SF87	3.8	8	7.1	12	9.1	9.1
SF97	7.4	15	13.8	23.6	18	18
SA37	0.25	0.4	0.5	0.6	0.4	0.4
SA47	0.4	0.8	0.7	1.1	0.8	0.8
SA57	0.5	1.1	1	1.6	1.2	1.2
SA67	1	2	1.8	2.9	2.5	2.5
SA77	1.8	3.9	3.6	5.9	4.5	4.5
SA87	3.8	7.4	6	11.2	8	8
SA97	7	14	11.4	21	15.7	15.7